

CREATE A FAVORITES LIST

If you would like to surf within only a specific set of channels, you can create a Favorites list.

1. Press the **Menu** button to access the Main Menu. Highlight Settings. Use the arrow buttons to highlight Edit Favorites and then press the **OK** button.
2. If you are not already in a 'New List' by default, arrow right to access a New List.
3. Use the **Up/Down Arrow** buttons on the remote control to move through the list of channels. When you are on a channel you want to add to your list, press the **Ok** button to mark it as part of this Favorites list.
4. To name a list, press the **Yellow** button on the remote.
5. To save your favorites list, press the **Blue** button on the remote and then press the **Ok** button.

ACCESS A FAVORITES LIST

1. Press the **Fav** button on the remote.
2. All Favorites lists will display. Lists that you have created will display with a star.
3. Arrow down to highlight the Favorites list you want to use and then press the **Ok** button.
4. With the favorites list selected, you will browse channels **only** within that list.

PURCHASE A NEW VIDEO ON DEMAND

1. Select the **On Demand** button. Select the library that you would like to choose from including: Free On Demand, HD, Movies, New Releases, Ending Soon, or Most Popular.
2. Select the event that you would like to purchase.
3. Select the **Rent** button.
4. The purchase screen will allow you to share the event with the rest of your whole home group before asking for your Purchase Pin. Enter 0000 and select the **Rent** button.

Visit our website for more information and to view tutorials.

www.getlynxx.com

VIEW AND SEARCH CURRENT VIDEO ON DEMAND RENTALS

1. To view your current Video On Demand rentals that are available for viewing, select the **On Demand** button.
2. Select the **Green** button on your remote.
3. To search for a specific Video On Demand title, select the **Yellow** button on your remote. A search library will appear

WEATHER

The weather app allows the current weather statistics to be viewed.

1. Select the **Menu** button on your remote. Select Apps, highlight Weather, and select the **OK** button
2. To access the Forecast, select the **Green** button within the application window.
3. To access the Radar, select the **Yellow** button within the application window.
4. Once in the Radar screen, select the **Blue** button to animate the radar and show a looping of current weather conditions.




Camp Douglas Office
127 US Highway 12/16
Camp Douglas, WI 54618
(608) 427-6515
www.getlynxx.com

New Lisbon Office
201 Leer Street
New Lisbon, WI 53950



For complete information and prices, please contact LYNXX's Customer Service department. Certain terms apply to establish service with LYNXX. Please contact LYNXX for more information.

3/9/2018

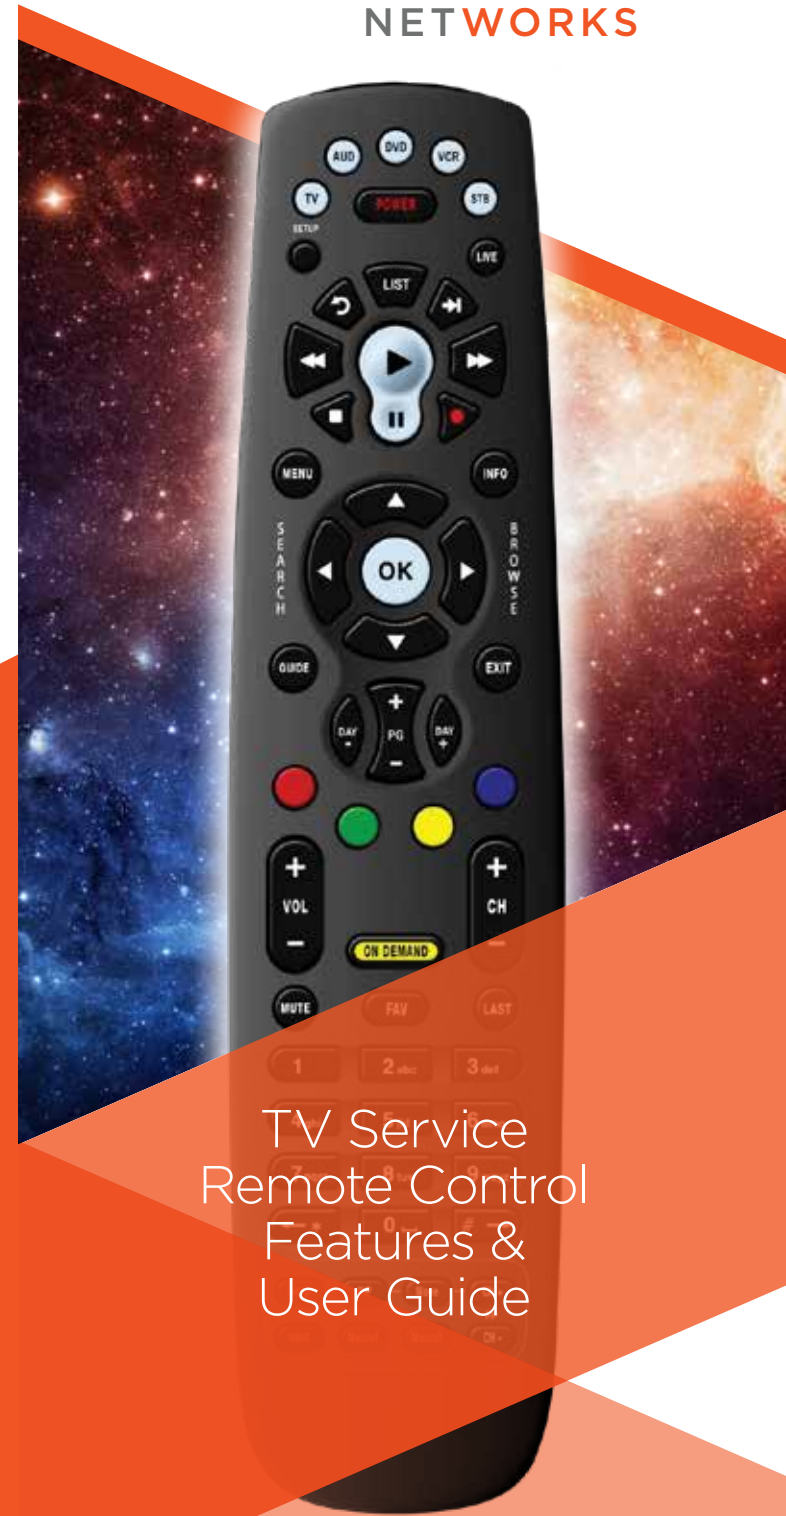

TV Service
Remote Control
Features &
User Guide

TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

Setup

Use for programming sequences of devices controlled by the remote.

Skip Forward, Skip Back, Rewind, Play, Forward, Stop, Pause, Record

In STB mode, these control the DVR functions. In other modes, these can control a VCR, DVD Player or PVR.

Menu

Displays the menu.

Guide

Opens the Interactive Program Guide.

Day +/-

Jump ahead or back one day in the Interactive Program Guide.

Red, Green, Yellow, Blue

Access additional features on your set-top box. Red=Weather, Green=Recent Calls, Yellow=Apps

Vol +/-

Raise or lower the volume.

Mute

Turn the sound off or on.

Aspect Ratio*

Temporarily change the conversion mode from Original Size or Fit to Screen.

Input

In TV control mode, will change the input of the device you are controlling.



Power

Turn on/off a selected device.

Live

Return to watching live TV.

List

Display a list of recorded, future and series rules on your DVR.

Info

Display the current channel and program information. Press again for more detail.

Browse, Search, Arrow, OK

Navigate and select onscreen choices.

(Browse) Right Arrow

Browse current station.

(Search) Left Arrow

Search for a full title or word within a title of a program.

Exit

Exit the current screen.

Page +/-

Page up or down in lists and Interactive Program Guide.

Channel +/-

Changes to the next higher or lower channel.

On Demand (VOD)

Access video on demand services.

Last

Recall the last channel you were watching.

FAV (Formerly Network)

View your favorite channels.

Number Keys (0-9)

Directly select a channel or enter options.

Closed Captioning

Turn on and off



CONTROL LIVE TV

Pause

Press the **Pause** button and the programming on the screen instantly freezes. Press the **Play** button to resume normal play.

Rewind

Press the **Rewind** button. Press it again up to four times to increase the rewind speed: x4, x15, x60, x300. To slow the Rewind speed, press the **Fast Forward** button. Press the **Play** button to resume normal play.

Restart

Press the **Guide** button. Highlight the program you wish to restart. Press the **Green** button to watch from the beginning.

Restart TV is only available on certain channels. It is indicated by the green clock Restart TV icon in front of the channel name in the Guide.



WHAT'S HOT APPLICATION

1. Select the **Menu** button on your remote. Select Apps, highlight What's Hot, and select the **Ok** button.
2. A window will appear on the screen with the most current popular channel information for the local area. Press the **Right** and **Left Arrow** buttons to view multiple categories.

The current What's Hot Channels are indicated by the popularity indicator to the right of the channel name in the guide.

608.427.6515

www.getlynxx.com